
American Standard

Installation Instructions 8350.235 8350.243

Exposed Yoke Wall Mount Utility Faucet

Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

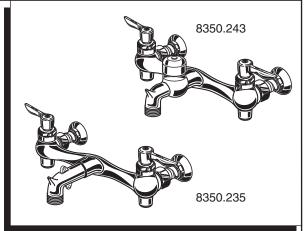

Certified to comply with ANSI A112.18.1M M965041 Rev. 1.2

RECOMMENDED TOOLS






Adjustable Wrench








Putty or Caulking Phillips Screwdriver

ROUGHING-IN DIMENSIONS

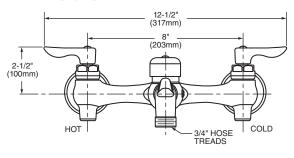

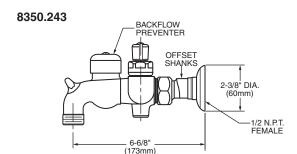


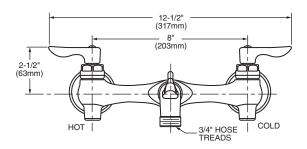

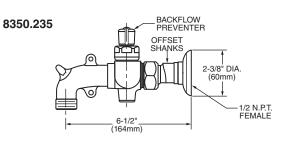


ROUGH-IN

■ Prepare water supply lines per "Roughing-in Dimensions". Install 1/2" NPT. SUPPLY NIPPLES

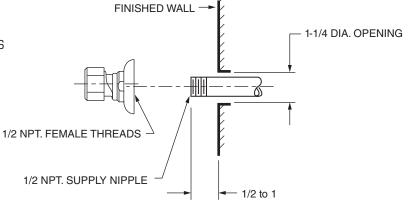


FINISH INSTALLATION

- Slide COUPLING NUTS (5) onto INLET SHANKS (3).
- Thread ESCUTCHEONS (2) fully onto INLET SHANKS (3).
- Thread INLET SHANKS (3) onto SUPPLY NIPPLES (1). Distance between INLET SHANK (3) outlets must be 8" to match the VALVE.
- Insert RUBBER WASHERS (4) into INLET SHANK (3).
- Attach VALVE (6) to INLET SHANKS (3). Tighten both COUPLING NUTS (5) firmly.

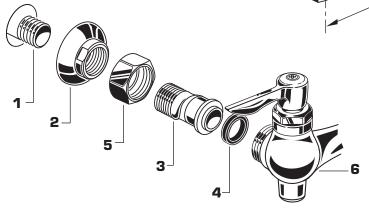

TEST FAUCET


- Turn HANDLES (1) TO OFF POSITION.
- Slowly turn water supplies on and check all connections for leaks.
- Operate HANDLES (1) to flush water lines thoroughly.
- Turn HANDLES (1) to OFF position.
- Thread ESCUTCHEONS (2) against finished wall.

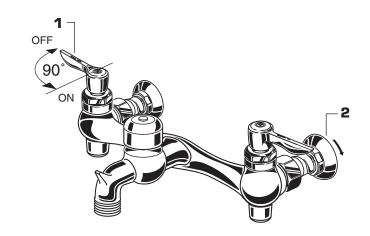

SERVICE

- To change direction of handle rotation, proceed as follows:

 - Turn HANDLE to OFF position.Remove HANDLE SCREW and HANDLE.
 - Remove SPRING CLIP (1).
 - Lift STOP WASHER (2), turn 90° and replace.
 Replace SPRING CLIP (1).
 Replace HANDLE and HANDLE SCREW.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

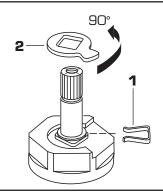

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID. POLISH, ABRASIVES, HARSH CLEANERS, OR A **CLOTH WITH A COARSE SURFACE.**

M965041 Rev. 1.2