

















 














































# MC-E Quick Reference Guide

- **Set Date** – Set Function Dial to SETUP . Press . Enter **MM** (Month) **DD** (Date) and **YY** (Year). Press  to accept.
- **Set Time** – Set Function Dial to SETUP . Press . Enter **HH** (Hours), **MM** (Minutes) and  (for PM). Press  to accept.
- **Assign Station Runtime** – Set Function Dial to SET PROGRAM . Enter the program number and press . Enter station number and press .  
To select a group of stations, enter the 1st and last station number within the group and press . Enter the desired runtime for the selected station(s) in minutes. Press  to accept. Assign a “0” to runtime to deactivate a station.
- **Assign Program Start Time** – Set Function Dial to SET PROGRAM . Enter the program number and press . Press  to review programmed start times. Enter start time number being modified or added and press . Enter “**HH**” (Hours), “**MM**” (Minutes) and  (for PM). Press  to accept. Erase a start time by assigning a value of “0”.
- **Assign Station Delay** – Set Function Dial to SET PROGRAM . Enter the program number and press . Press   to access station delay. Enter **H** (Hours), **MM** (Minutes) and **SS** (Seconds). Press  to accept. Maximum allowable delay is four hours. No delay is the default.
- **Watering Day Schedule** – Set Function Dial to SET PROGRAM . Enter the program number and press .  
Press  to review program schedule. Press    to set schedule to even days. Press    to set schedule to odd days. Press    to activate everyday. Enter the day designation number (1=SUN, 2=MON, etc.) and press  to exclude the day from schedule. Reactivate a day by entering the day designation number (1=SUN, 2=MON, etc.) and press .
- **Manual Operation** – Set Function Dial to MANUAL . Enter the station number you want to activate and press .  
MC-E operates in “True Manual” mode, the station will remain active until midnight. Turn off manual by moving the Function Dial to Auto or by pressing .
- **Rain Off** – Set Function Dial to RAIN OFF . After the 3-second countdown, all automatic watering will halt until the dial is returned to **AUTO RUN** position.  
You can also set a rain off duration in days with the maximum rain off delay of 14 days. Enter the desired delay duration in days and press  to accept. Return the Function Dial back to **AUTO RUN**. To deactivate rain off, turn the function dial to RAIN OFF and set rain off value to “0”. Press .
- **Set Event Days** – Set Function Dial to SETUP . Press  twice. Enter **MM** (Month) and **DD** (Date). Press  to accept. Delete Event Days by entering “00 00” to Month and Date.
- **Set Master Valve** – Set Function Dial to SETUP . Press . Press  or  to select the station number. Press  or  to toggle ON or OFF.
- **Set Station 2 as Flow Alarm** – Set Function Dial to SETUP . Press . Press  for Station or  for Flow Alarm.
- **Set a Looping Program** – Set a Start Time to the program. (See **Assign Program Start Time**.) Set Function Dial to SET PROGRAM .  
Enter the program number and press . Press    to access Loop function.  
Enter End Time in “**HH**” (Hours), “**MM**” (Minutes) and  (for PM). Press  to accept.  
Delete a looping program by entering a “0” End Time.

**Irritrol**®



# MG-E Program Schedule

Program Number	Start Time								Station Delay	Schedule							Water Budget	
	1	2	3	4	5	6	7	8		Su	Mo	Tu	We	Th	Fr	Sa		Even
1																		
2																		
3																		
4																		
5																		
6																		
7																		
8																		

Station Number	Program Assigned								Runtime	Master Valve	Flow Value	Description
	1	2	3	4	5	6	7	8				
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												

Station Number	Program Assigned								Runtime	Master Valve	Flow Value	Description
	1	2	3	4	5	6	7	8				
13												
14												
15												
16												
17												
18												
19												
20												
21												
22												
23												
24												

Station Number	Program Assigned								Runtime	Master Valve	Flow Value	Description
	1	2	3	4	5	6	7	8				
25												
26												
27												
28												
29												
30												
31												
32												
33												
34												
35												
36												

Station Number	Program Assigned								Runtime	Master Valve	Flow Value	Description
	1	2	3	4	5	6	7	8				
37												
38												
39												
40												
41												
42												
43												
44												
45												
46												
47												
48												

Monthly Water Budget

Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec
%	%	%	%	%	%	%	%	%	%	%	%

Event Days

--	--	--	--	--	--	--	--	--	--	--	--

© 2006 The Toro Company • Irrigation Division • www.toro.com

Form Number 373-0384 Rev. A

