



■ Order by Part Name and
Part Number (Bold Face Type)

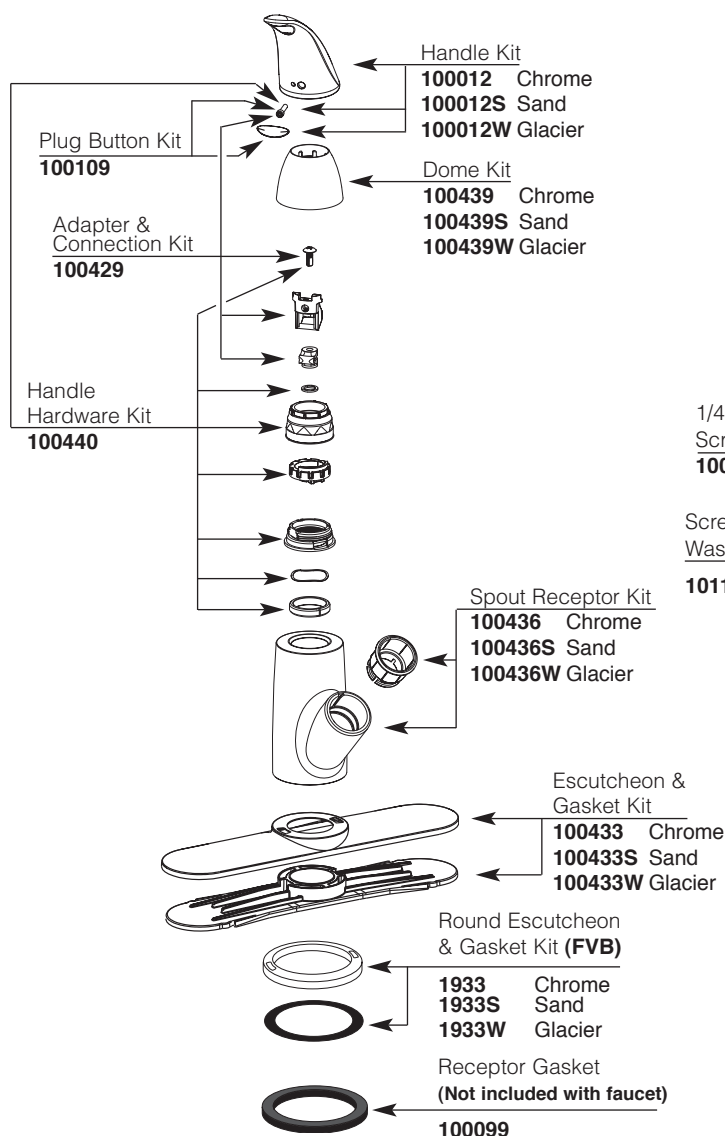

PureTouch® Single Control Kitchen Faucet with Water Filter & Pullout Spray		
MODEL	HANDLE TYPE	FINISH
7850	Lever	Chrome
7850S	Lever	Sand
7850W	Lever	Glacier

**1/4 Turn Connector/
Screen Washer Kit**
100444

**Screen
Washer Kit**
101199

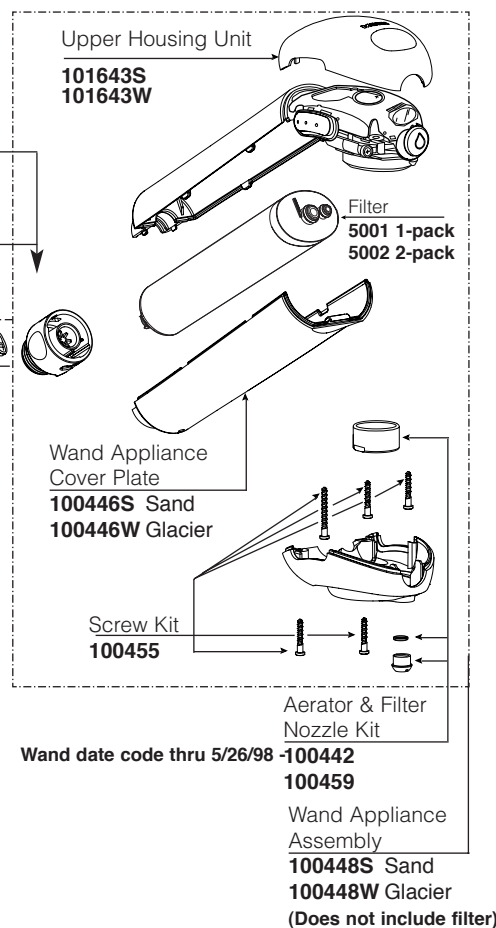


**Please Note: For under the deck parts, service kits,
and valve bodies, you must refer to the following
page.**

• Note - Battery & Screw
Replacement Instructions: INS133A

■ Order by Part Name and
Part Number (Bold Face Type)

PureTouch® Valve Bodies/Below Deck Parts

OLD STYLE VALVE BODY (Cast) (Prior to 1/99)

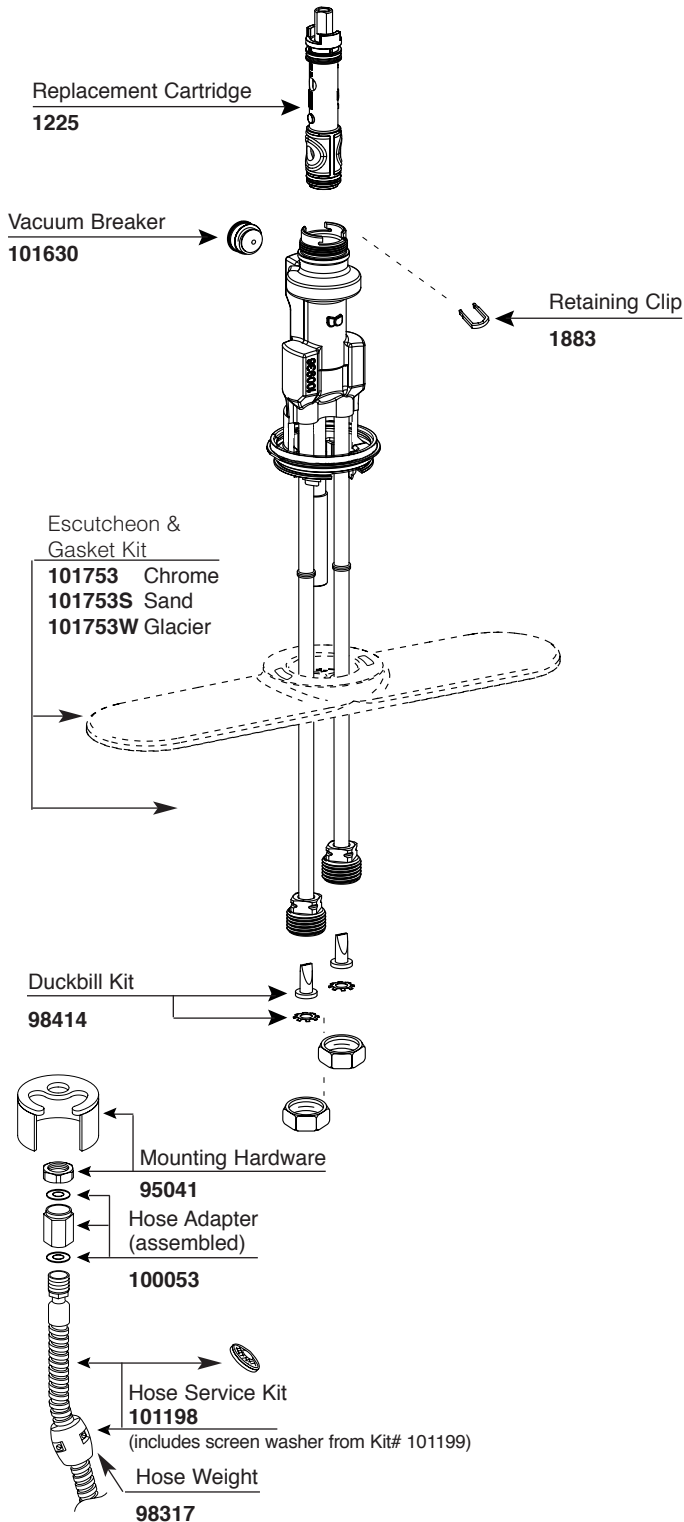

NEW STYLE FABRICATED VALVE BODY (FVB)

