

Remote Control Instruction PROSTOCK PSWRP001


Thank you for choosing ProStock!

Before Installation, please read these instructions carefully and keep them available for future maintenance and reference.


--Contents--

Remote Control Installation	03-04
Remote control Illustration	05-06
Remote Control Instruction	06-15
Nozzle Cleaning	07
Automatic Lid On/Off	08
Automatic Lid Open/Close	08
Rear and Front Wash Functions	09
User Adjustments and Positioning.....	10-11
Water Pressure Adjustment	10
Spray Nozzle Adjustment	10
Water Temperature Adjustment	10
Blower Temperature Adjustment	10
Seat Temperature Adjustment	10-11
Setting Automatic Functions	12-13
Energy Saver Options	14
Manual Flushing	15

Tools Required

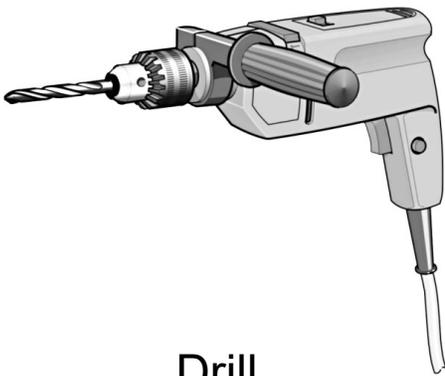


Drill

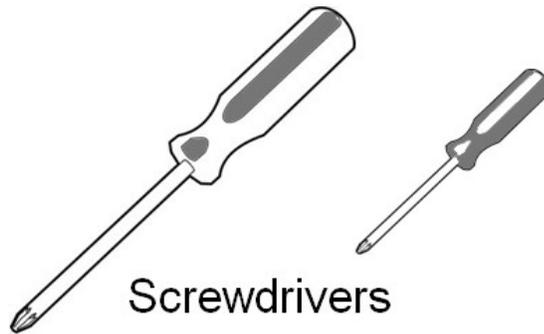


Screwdrivers

Part 1 - Remote Control Installation


- 1) Mark two(2) holes on the wall parallel with the floor and 4.165" (106mm) apart. (Center hole to Center hole)* – The height can be set at any level, but should be easily accessible to a person sitting on the toilet and be compliant with local codes.
*you can use the remote control bracket and a torpedo level to find and mark these holes if needed.
- 2) Using a 7/32" drill bit, drill both holes into the wall making sure to use the proper bit for your application EX: Use a 7/32" Masonry bit only for tile or cinderblock walls.

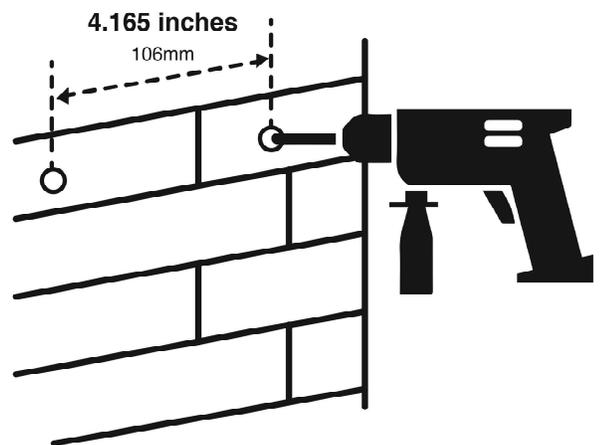


- 3) Once Drilled, Insert the wall anchors into the holes and push firmly into place so they are flush with the surface of the wall
- 4) Using the provided Screws, hang the remote control bracket onto the wall by inserting the screws into the anchors using a clockwise motion until the mounting plates is held securely in place.

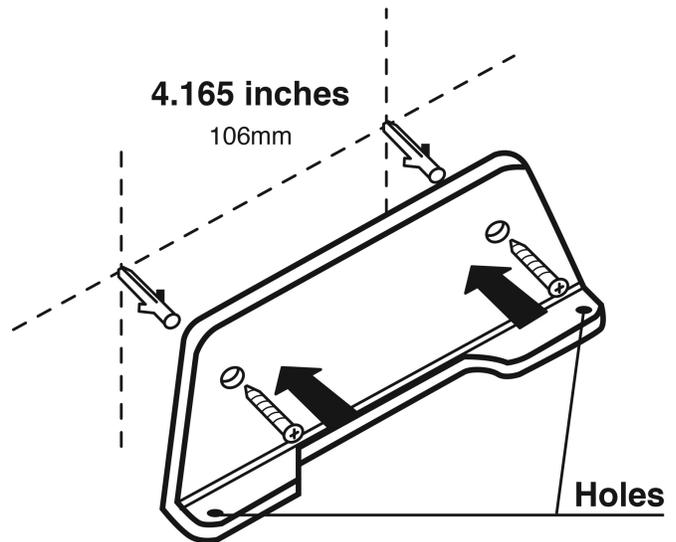

- 5) Locate the battery hatch on the back of the battery and open it by turning the remote control upside down and pushing the battery hatch firmly up until it clicks open.
- 6) Once open, insert three (3) AAA batteries in the direction indicated.

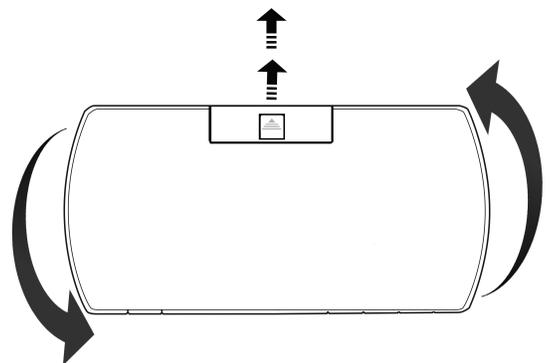


- 7) Place Remote in bracket facing toward the user. You are now ready to begin using your remote control.
- 8) This bracket includes 2 screws designed to secure the remote control in place. If you are installing this remote control in a public place, or are concerned about losing it, please utilize the included screws to securely attach the remote control to the remote control bracket.

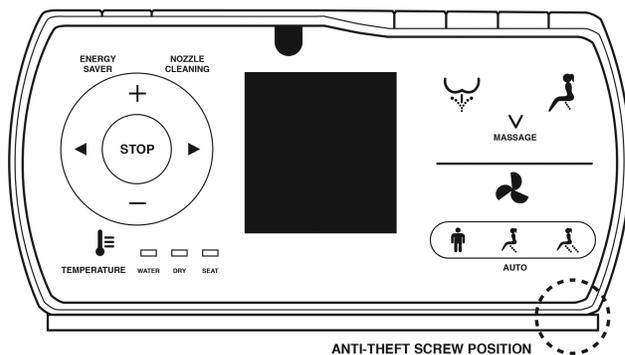


Note: Please do not Install or use this remote control in moist places like a steam room or sauna. It is also not designed to be used outdoors or in a place where it can easily get wet.


--Remote control Illustration--

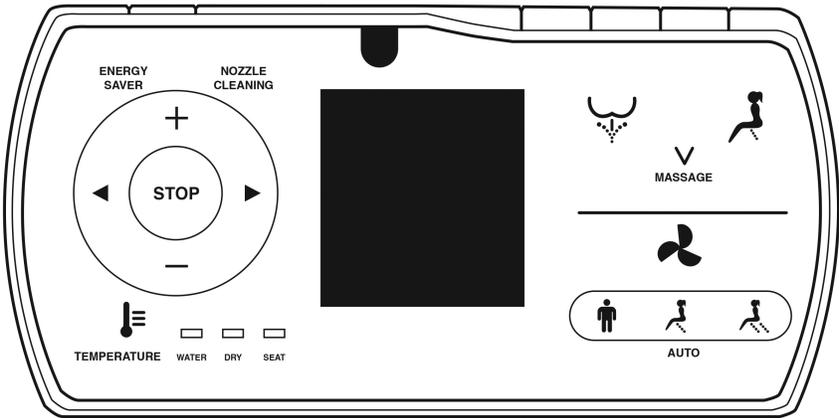


Front View

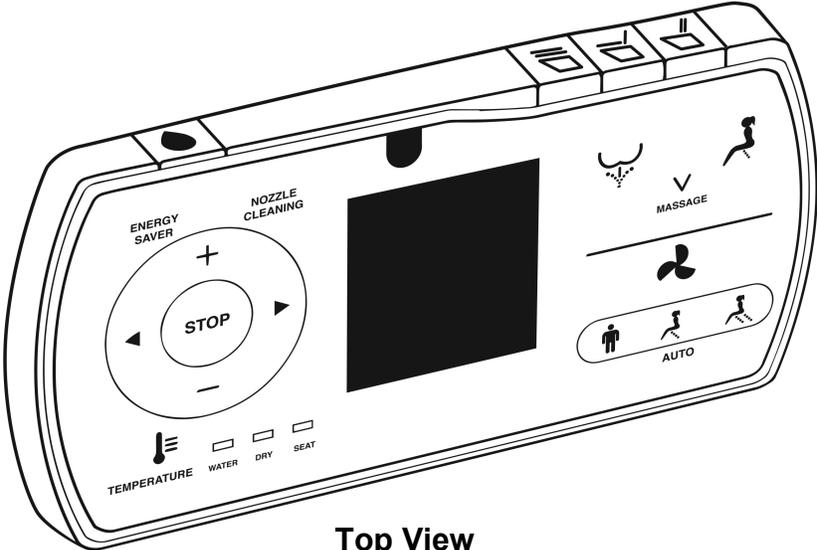


Top View

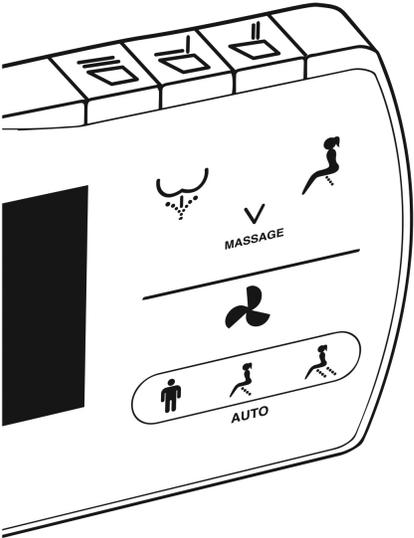


Right Side

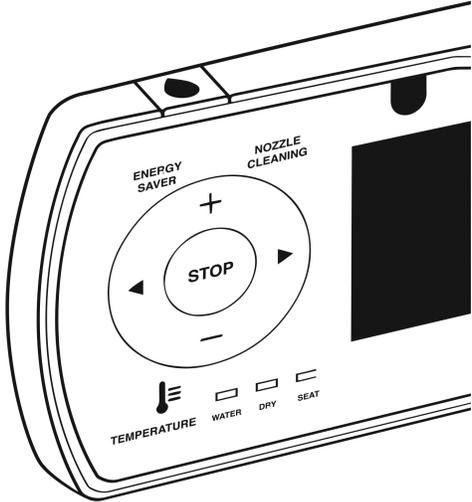

Left Side

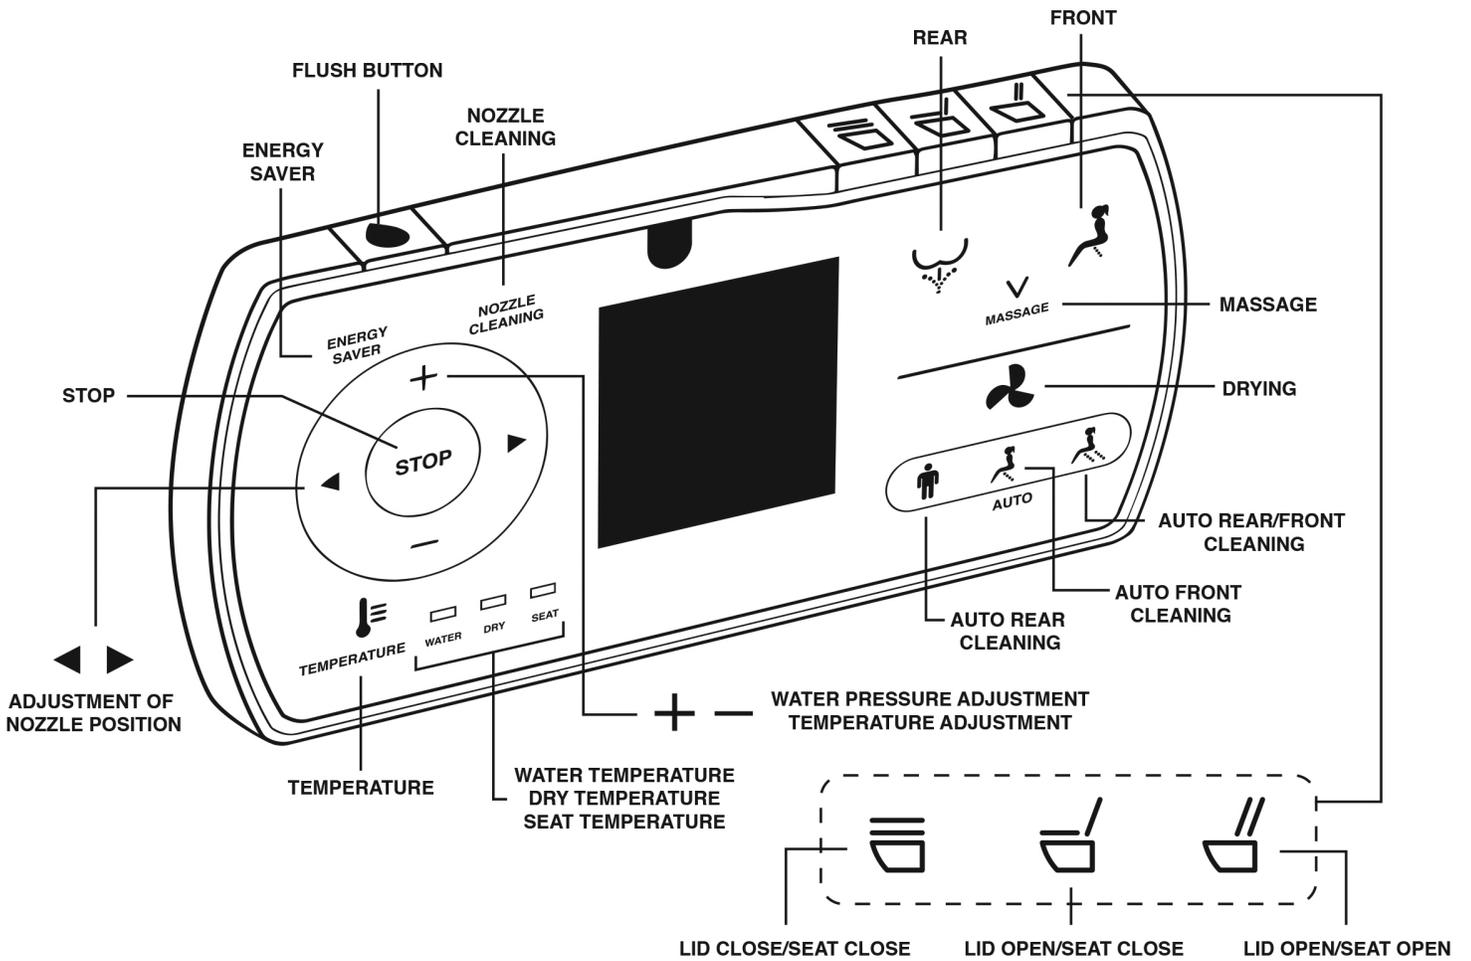

Nozzle Cleaning

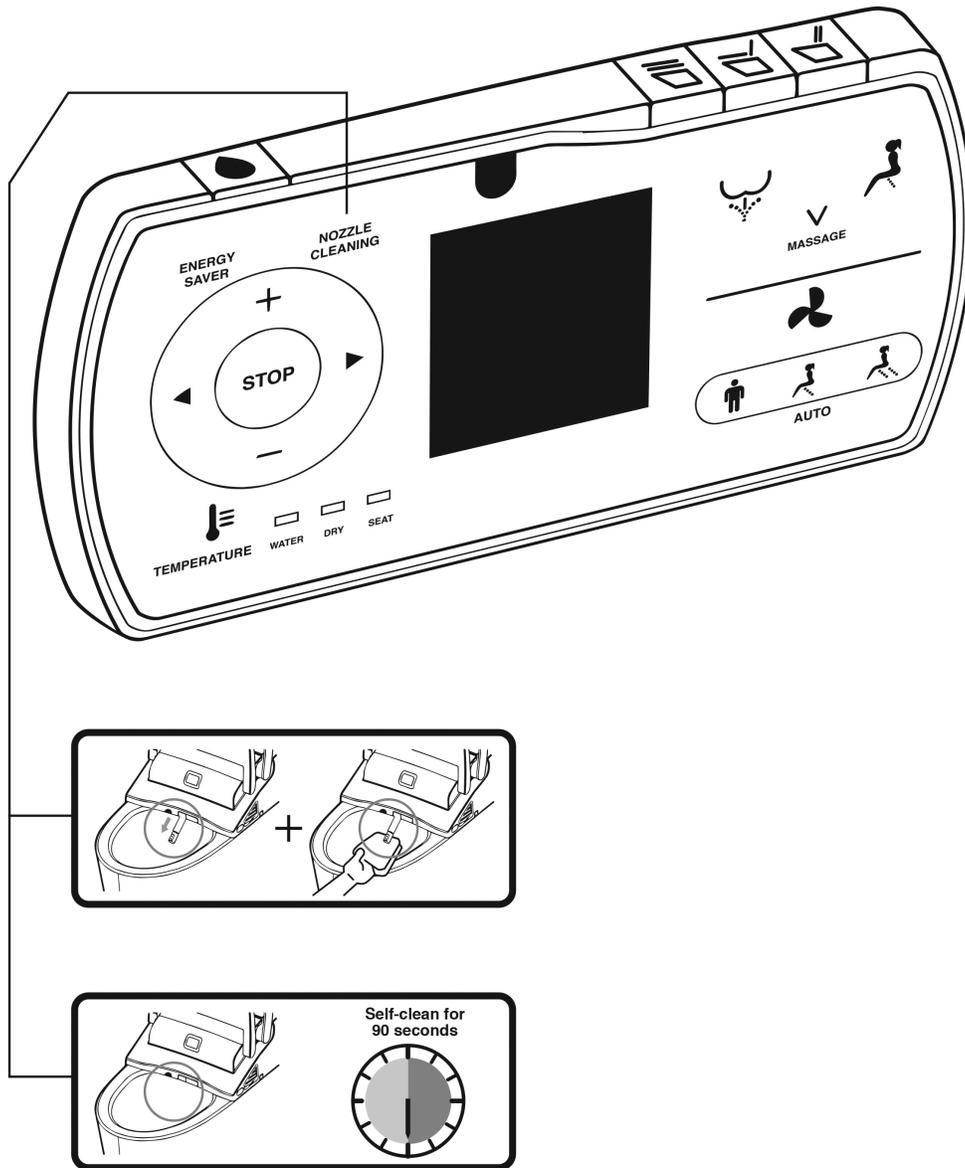

Nozzle cleaning (Quick Press):

Pressing the "NOZZLE CLEANING" button will activate the nozzle manual clean function for a while. The spray wand will extend for a full 90 seconds to allow any manual cleaning that may be required. Once the allotted time is complete, the spray wand will retract back into place.


Nozzle self-cleaning (Long Press):

Pressing and holding the "NOZZLE CLEANING" button will activate the nozzle self-clean function. The spray wand will remain in place and not extend while water flows for a full 90 seconds allowing the spray wand to complete a quick Self-Cleaning

Automatic Lid On/Off

The automatic open/close function needs to be activated before it will work properly. Follow the steps below to turn on this time saving feature.

- 1) Press and hold the STOP button on the remote control (Found on the left side of the remote control inside the circle)
- 2) Simultaneously press the CLOSE button  once. (Found on the top of the remote, right side)

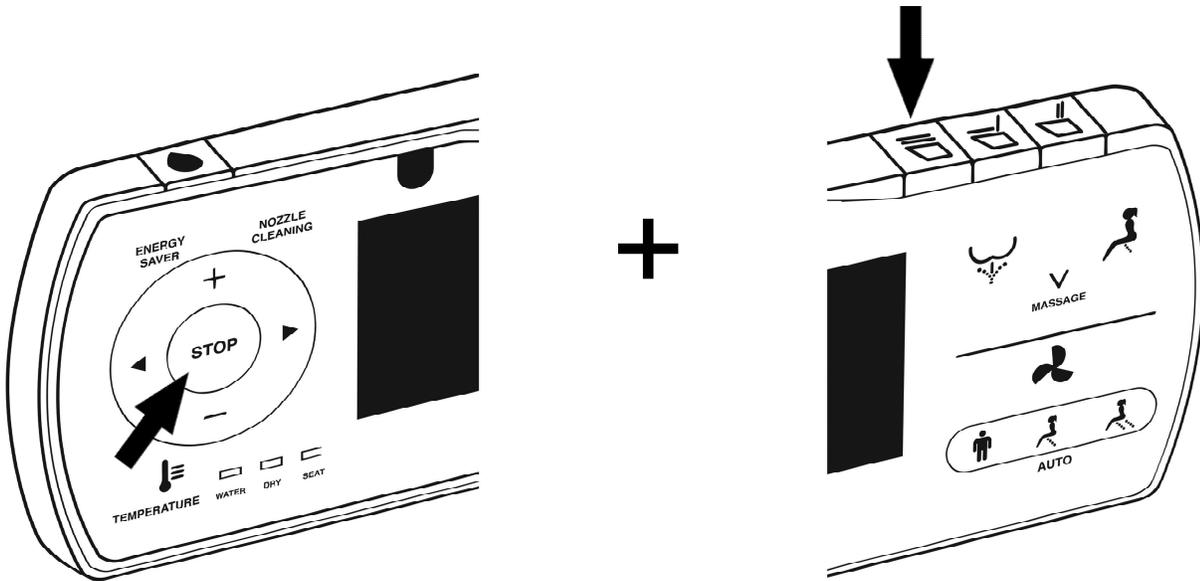

Auto Lid open/close

(Only for toilets with this function)


Many models are equipped with an automatic Open/Close function for the toilet seat and lid. If the model being used is equipped with this function (If your toilet came with a remote like the one shown above it is so equipped) it is recommended that the user refrain from closing the lid and seat manually and use the remote control functions. There are 3 functions to choose from:

Press this  icon to close the seat cover and close the lid as well.
(Located on the top, right side of the remote control. The left button)

Press this  icon to open the lid and close the seat.
(Locate on the top, right side of the remote control. The Center button)

Press this  icon to open the lid and the seat together.
(Located on the top, right side of the remote control. The Right button)

Rear and Front Wash

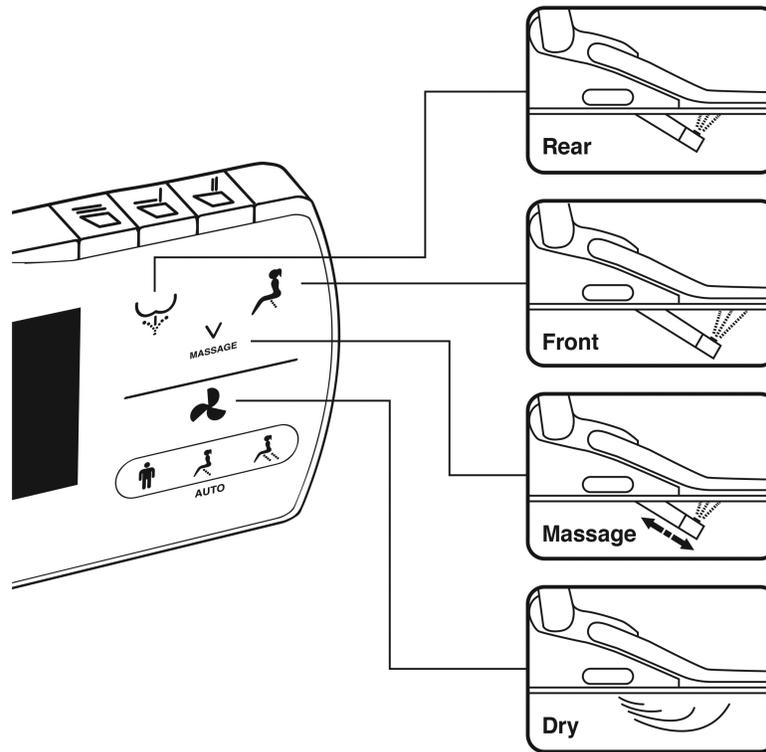

Pressing the “Rear” button will activate the rear-washing wand designed for posterior cleansing for all users and is set to automatically run for a preset amount of time. This function will automatically shut off once the allotted time is spent. To stop the flow before the allotted time press the “Rear” button again and the spray wand will deactivate and retract.



Pressing the “Front” button will activate the front-washing wand designed for increased feminine hygiene, and is set to automatically run for a preset amount of time and will automatically shut off once the allotted time is spent. To stop the flow before the allotted time press the “Front-Washing” button again and the spray wand will deactivate and retract.




Pressing the “Massage” button will activate the washing option that is designed to move forward and back to extend the range and scope of cleaning. To stop the massage process, press the “Massage” button again.



Pressing the “Dry” button activates a blower motor that is designed to dry the user off after utilizing the wash cycles. After a user feels he/she is efficiently dry, the air can be stopped by pushing the Dry button again, or they can choose to simply stand up, at which point the fan will automatically shut off.

User Adjustments and Positioning

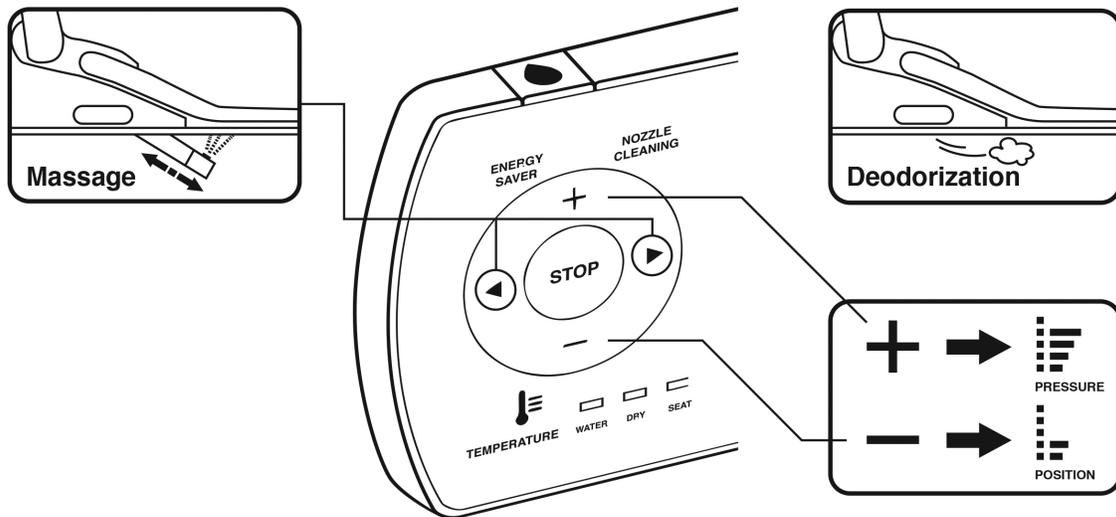

Water Pressure Adjustment

During rear or front washing, pressing either the + or – button (found on the left half of the remote inside the circle) will adjust the pressure of the wash. + will increase the pressure, - will decrease the pressure.

Spray Nozzle Location Adjustment

To adjust the spray to better suit the user simply press the ◀ ▶ arrows on the remote during use (found on the left half of the remote inside the circle). This will move the spray wand forward towards the front of the toilet or backwards towards the rear of the toilet. (There are no buttons for left to right adjustments)

Water Temperature Adjustment



Pressing the Temperature Icon one time  will select the water temperature setting for adjusting the desired water temperature. Use the + or – button (found on the left half of the remote inside the circle) to adjust the temperature higher or lower as desired

Blower Temperature Adjustment


Pressing the Temperature Icon two times  will select the Blower/Fan temperature setting for adjusting to the desired air temperature. Use the + or – button (found on the left half of the remote inside the circle) to adjust the temperature higher or lower as desired.

Seat Temperature Adjustment


Pressing the Temperature Icon three times  will select the Seat Warmer temperature setting for adjusting to the desired temperature of the toilet seat. Use the + or – button (found on the left half of the remote inside the circle) to adjust the temperature higher or lower as desired

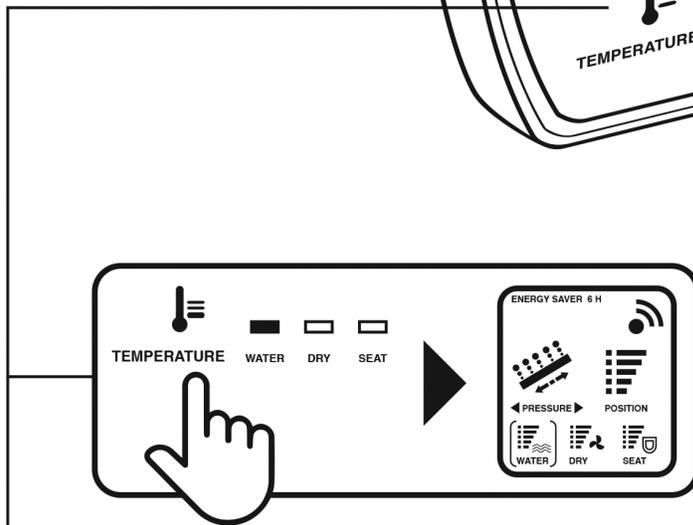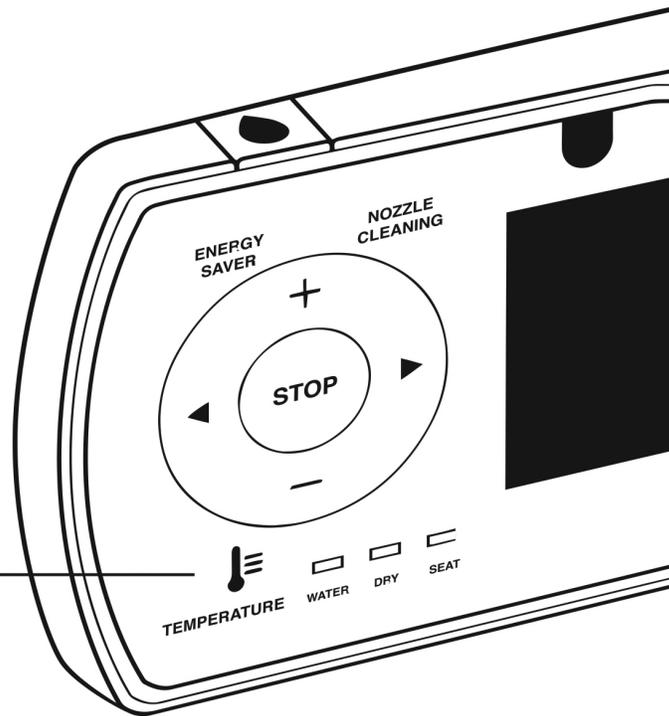

1x

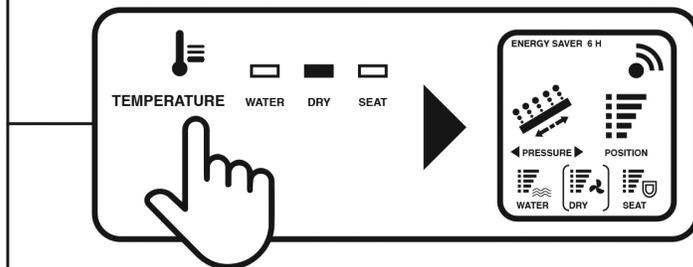

2x

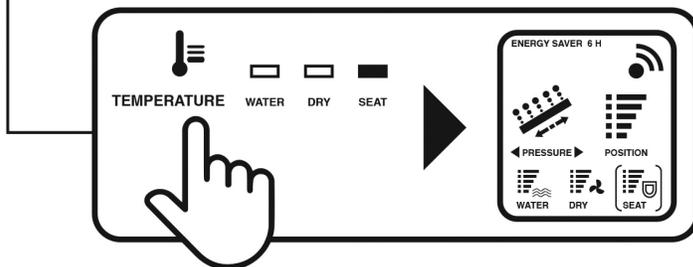

3x

Setting Auto Functions


The default settings of all the automatic functions are set to level 3. This includes the water temperature; the water pressure; the blower/air speed and temperature; the wand position; and the toilet seat temperature. However, the massage/pulse action of the cleaning wand is automatically set in the off position.

To adjust the settings for the automatic functions follow the steps below

Automatic Rear Cleaning Settings

- 1) To adjust the automatic functions for the water pressure, nozzle position, and temperature functions, press and hold the user icon  (Found on the lower right half of the remote control) until the LED area displays the image shown above.
- 2) To adjust the settings use the + or – buttons and also the   buttons (Found on the left half of the remote inside the circle).
- 3) Once the desired settings** are complete, press the Rear Cleaning button for 3 seconds  to save the settings. (Quick-Pressing the user icon  once will display the previously saved settings.)


** During Automatic Rear cleaning Users can still change the level of the temperature and massage status. Pushing the Rear Cleaning button again for 3 seconds after the changes are made will save the new settings.

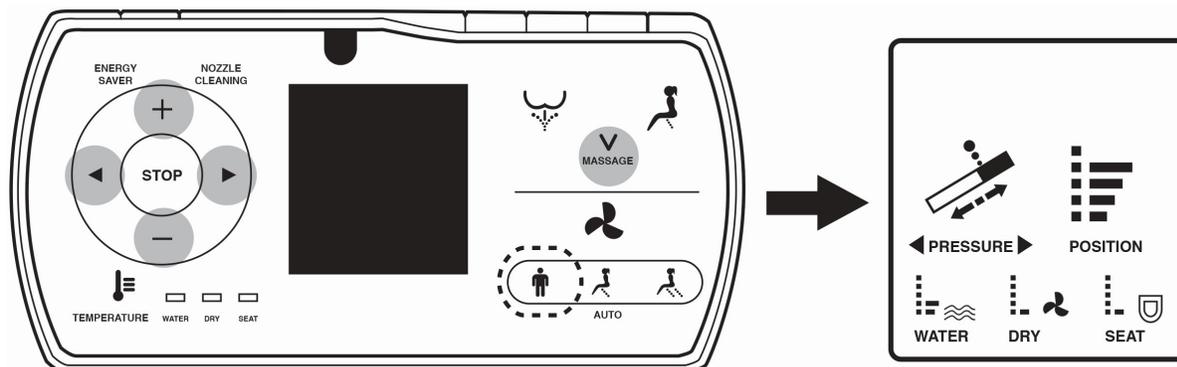

Automatic Front Cleaning Settings

- 1) To adjust the automatic functions for the Spray Nozzle position, by clicking on the Front Cleaning button  (Found on the lower right half of the remote control)
- 2) To adjust the settings use the + or – buttons (Found on the left half of the remote inside the circle).
- 3) Once the desired settings** are complete, press and hold the Front Cleaning button again, this time for 3 seconds to save the settings. (Quick-Pressing the Front Cleaning icon once will display the previously saved settings.)

** During Automatic Front cleaning Users can still change the level of the settings. Pressing the Front Cleaning button again for 3 seconds after the changes are made will save the new settings.

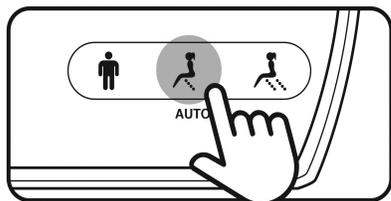

Automatic Rear and Front Cleaning Combination Settings




Note: To find the suitable level and temperature of the rear and front cleaning combination it is required that the User be seated and using the function. This may require some time to figure out the desired temperature settings. The Water temperature for both the front and the rear cleans is automatically set at 90deg(F) and the Blower default temperature is 180.

- 1) After sitting astride the toilet press the Automatic Rear and Front Wash button  to begin the washing process
- 2) Adjust the wand position, water pressure, fan/blower temperature, seat temperature and massage functions to the desired settings** (See page 10 for instructions)
- 3) After Rear cleansing settings have been completed, the toilet will automatically switch to Front Cleansing Mode, please remain seated.
- 4) Once the Front washing begins, adjust the wand position, water pressure, and massage functions to the desired settings** (See page 10 for instructions)
- 5) After Front cleansing settings have been completed, the toilet will automatically switch to the Drying Mode, please remain seated still
- 6) Once the Drying Mode begins, adjust the blower temperature to the desired settings** (See page 10-11 for instructions)
- 7) Once all the parameters are set to the user's satisfaction, press the Automatic Rear and Front Wash button  again to see the LED display the setting chosen and run the user specified washing and drying cycle.

** Once the Parameters are set the remote control will automatically save the preferred settings. Anytime the user adjusts the setting using the Automatic Rear and Front Wash button. The remote control will save the changes automatically.


Energy Saver Options

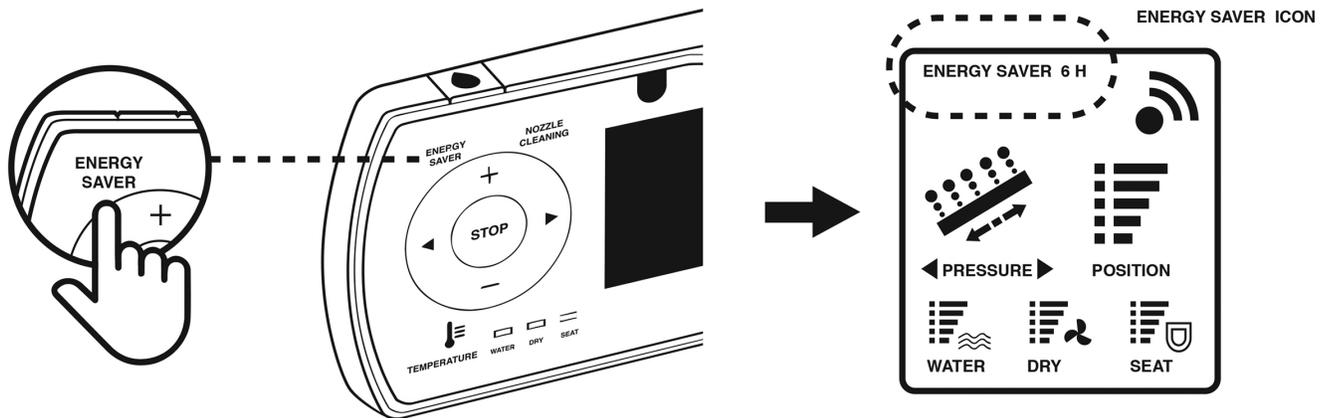


Press the “Energy Saver” Button to activate the LCD Screen and Energy Saver Functions. There are four(4) duration allocation options available, 3 hour; 6 hour; 9 hour; and Off. You can adjust the length allotted and the time of day to begin Energy Saver mode by following the steps below**. The Energy saver mode temporarily shuts off the seat and water warming as well as the night light and power light. You will know when the electronic features are in Energy mode if the “Energy Saver” light is on.

- 1) Press ENERGY SAVER button
- 2) Press "ENERGY SAVER" button again until the LCD screen displays the number of hours the Bidet should be in energy saver mode (3, 6, 9). If the user would like to turn off the “ENERGY SAVER” function, continue pushing the button until no numbers appear. The “ENERGY SAVER” Icon will disappear three (3) seconds after the selection is made. “ENERGY SAVER” function begins at 9:00am and continues for the allotted time chosen by the user.

**During the allotted time period if the user sits on the seat the energy saver mode is paused and will automatically enter into the normal function mode (including the seat) The energy saver mode restores after the user leaves and the LCD screen will no longer display user icons.

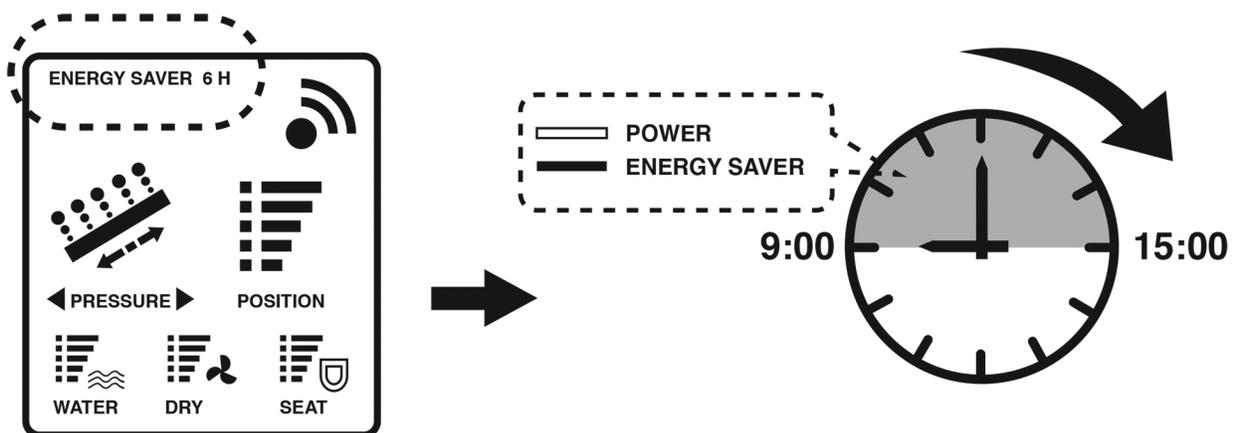

Manual Flush

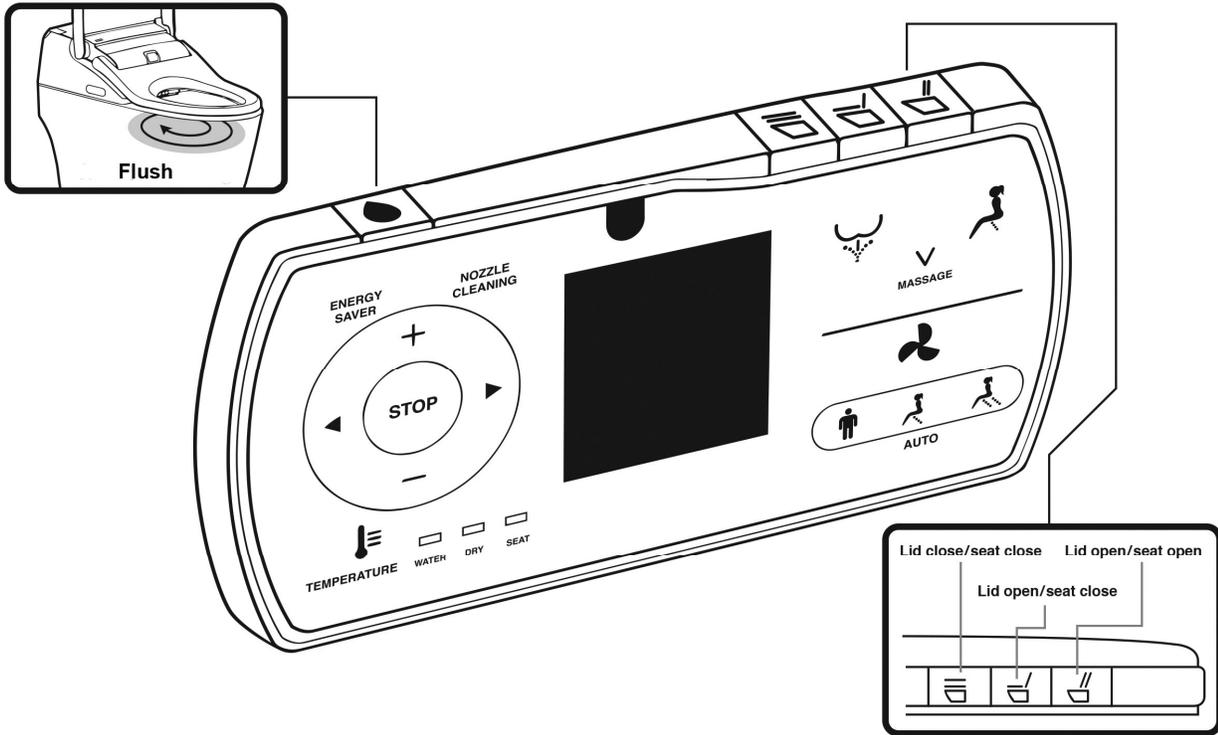

**Press and hold "FLUSH" button marked with the water drop on the top left of the remote control to activate full flushing.