



# KN-4 Replacement Valve Cartridge Instructions

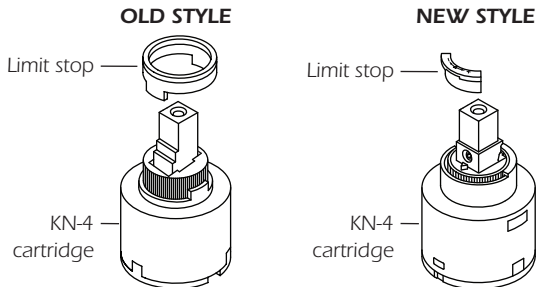

Remove the old KN-4 cartridge with limit stop. Install the new KN-4 cartridge with limit stop.

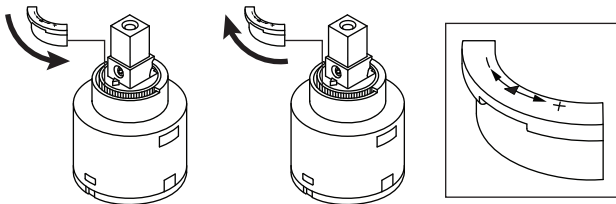

Turn limit stop counterclockwise to allow full handle turn to the hot position. Turn limit stop clockwise to limit handle turn to the hot position.