



Model XPH06Z Parts list

A = Standard Equipment

O = Circuit Diagram

Item#	MJ Part#	Description	Q'ty	Unit
1	187714-9	HOUSING SET	1	
	C10 263005-3	RUBBER PIN 6	2	PC.
	D10	INC. 21		
2	814U17-1	XPH06 NAME PLATE	1	
3	266429-2	TAPPING SCREW 3X16	9	PC.
4	419250-0	F/R CHANGE LEVER	1	PC.
5	650710-5	SWITCH C3JW-4B	1	
6	619331-2	ROTOR	1	
7	629999-6	STATOR	1	PC.
8	620244-2	LED CIRCUIT	1	
9	643860-3	TERMINAL	1	PC.
10	126180-5	SPEED CHANGE LEVER ASSEMBLY	1	PC.
11	232182-2	LEAF SPRING	1	PC.
12	251468-5	- FLAT HEAD SCREW M6X22	1	PC.
13	766008-1	KEYLESS DRILL CHUCK 13	1	PC.
14	126353-0	GEAR ASSEMBLY	1	
15	266786-8	+ PAN HEAD TAPPING SCREW 2X10	4	PC.
16	620245-0	CONTROLLER	1	
17	687464-1	SUPPORT	1	PC.
18	424517-3	CUSHION	1	PC.
19	142263-3	INDICATOR PANEL COMPLETE	1	
20	802A04-2	CAUTION LABEL	1	
21	187714-9	HOUSING SET	1	
	C10 263005-3	RUBBER PIN 6	2	PC.
	D10	INC. 1		
22	802A05-0	CAUTION LABEL	1	
A01	251314-2	+ SCREW M4X12	1	PC.
A02	346449-3	HOOK	1	PC.
A03	784637-8	+ - BIT 2-45	1	PC.