

OS and Parts List

OS List		
OS Number	Controls	Ventilator Type
VNT5070H1000	No	HRV
VNT5070E1000	No	ERV
VNT5150H1000	No	HRV
VNT5150E1000	No	ERV
VNT5200H1000	No	HRV
VNT5200E1000	No	ERV
VNT6150H1000	No	HRV
VNT6200H1000	No	HRV

Parts List (see illustration on page 39 or page 40 for figure number references)						
Fig. No.	Description	VNT5070	VNT5150	VNT5200	VNT6150	VNT6200
1	Polypropylene HRV Core (not sold separately)	50063805-001 9" Core	50053952-001 10" Core	50053952-002 15" Core	50053952-001 10" Core	50053952-002 15" Core
	Enthalpy ERV Core (not sold separately)	50063805-002 9" Core	50053952-003 10" Core	50053952-004 15" Core	N/A	
2	Replacement Filter Kit	50063805-003	50053952-005	50053952-006	50053952-005	50053952-006
3	Replacement Motor	50063805-004	50053952-010		VNT6150XIMPEL1	50053952-010
4	Latch & Hinge Kit	N/A				
5	Condensation Drain Fitting Kit	N/A				
6	Adjustable Hanging Strap Set (optional on VNT5070)	N/A				
7	6" diameter Plastic Keeper	N/A				
8	6" diameter Plastic Double Collar	N/A				
9	5" diameter Plastic Keeper	50063805-006	N/A			
10	5" diameter Plastic Collar	50063805-005	N/A			
11	Replacement LVC Electronic Board (Speed Control)	50063805-010	50053952-012		VNT6150XLVCBD1	VNT6200XLVCBD1
12	Replacement HVC Electronic Board	50053952-013				
13	Front Access Door	50063805-007	50053952-015			
14	Mounting Bracket	50063805-008	N/A			
15	Matrix Ventilation Hood	50063805-009	N/A			
16	Aluminum Distribution Plates	N/A			VNT6150XALPLT1	VNT6200XALPLT1

Parts List (not illustrated)	
Part Number	Description
50053952-020	20/40/60 Minute Timer (compatible with all HRVs & ERVs)