


# SET-UP GUIDE FOR OASIS® HANDS-FREE BOTTLE FILLER ELECTRONICS

Factory default program settings are:

- a. Unfiltered unit
- b. Filtered Capacity = 4750 gallons [18000 liters]
- c. Units = Gallons
- d. Flow Rate = 1.0 GPMD
- e. Bottle Count = 3 sec rule (1 Bottle)
- f. Buzzer = On
- g. 20 second maximum dispense time

**For Hands-free VersaFiller models**, access the push button located behind the bottle filler by removing the side screws and using tilt and tether feature or removing the top cap.

**For Hands-free Aqua Pointe models**, remove lower front panel (if applicable) or lift out lower edge of upper panel to reach remote push button.

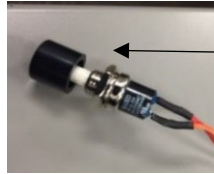

Push button

To change the program settings, follow these steps:

<u>Display</u>	<u>Action</u>
00000000 BOTTLES SAVED (Home Screen)	Depress button for 3 seconds to enter into the following menu settings and make changes. Note: at anytime it will exit menu and save settings when idle for 10 seconds (no button press) and revert back to Home Screen.
UNFILT/FILT? UNFILTERED UNIT [FILTERED UNIT]	Depress button 3 seconds to change from Unfiltered to Filtered unit, or momentary press to advance to next menu.
FILT CAPAC OF 4750 GAL [18000 LTR]	Depress button for 3 seconds to change filter capacity to 725 GAL [2740 LTR]. Depress button for 3 seconds to change filter capacity to 1100 GAL [4150 LTR]. Depress button for 3 seconds to change filter capacity to 1250 GAL [5000 LTR]. Depress button for 3 seconds to change filter capacity to 1500 GAL [5670 LTR]. Depress button for 3 seconds to change filter capacity to 3000 GAL [11000 LTR]. Depress button for 3 seconds to change filter capacity to 4750 GAL [18000 LTR].  or momentary press to advance to next menu.
RESET 00000000 NEW FILTER	Depress button for 3 seconds to reset water usage count, or momentary press to advance to next menu.
LTR/GAL GAL[LTR]	Depress button 3 seconds to change from Gallons to Liters, or momentary press to advance to next menu.
SELECT RATE 1.0 GPMD UNIT [3.8 LPMD UNIT]	To change flow rate, momentarily depress button to change whole gallon digit. Hold button 3 seconds to advance to TENTHS of gallon digit. Depress momentarily to change the digit. Hold button 3 seconds to advance to the next menu.
3 sec rule ? 3 sec [0.5L]	Depress button for 3 seconds to switch from 3 sec rule to 0.5L bottle, or momentary press to advance to next menu. (The 3 sec rule increases the bottle count by 1 if the water is dispensed for 3 sec or more. When .5L is selected, the bottle count will advance based on .5L volumes dispensed using FLOW RATE and dispense time to calculate total volume dispensed.)
Buzzer On	Depress button for 3 seconds to switch from audible beep to muted beep
Bot Filler Set time: 20 s	Depress button for 3 seconds to change maximum dispense time to 10, 20 or 30 seconds, or momentary press to advance to next menu.
RESET 00000000 BOT COUNT?	Depress button for 3 seconds to reset BOTTLES SAVED count to zero (Home Screen), or momentary press to advance to next menu.

OASIS INTERNATIONAL  
222 East Campus View Blvd. • Columbus, OH 43235 U.S.A.  
1-800-950-3226  
[www.oasiscoolers.com](http://www.oasiscoolers.com)