



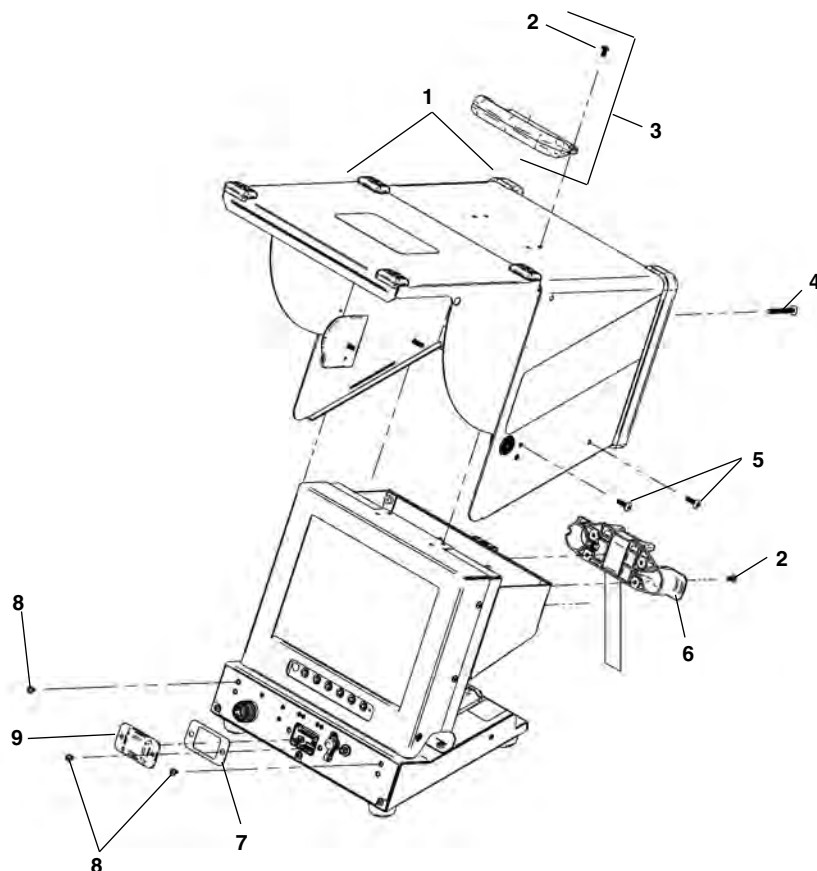


**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description
1	33263	Shell Asm.
2	33268	Screw 8-32 x 3/8" (8)
3	14838	Handle Asm.
4	33273	Screw 10-32 x 1 3/4" (4)
5	33278	Screw 10-32 x 5/8" (4)
6	33283	Cable Wrap
7	33288	VGA Gasket
8	33298	Screw 8-32 x 1/4" (6)
9	33293	VGA Cover

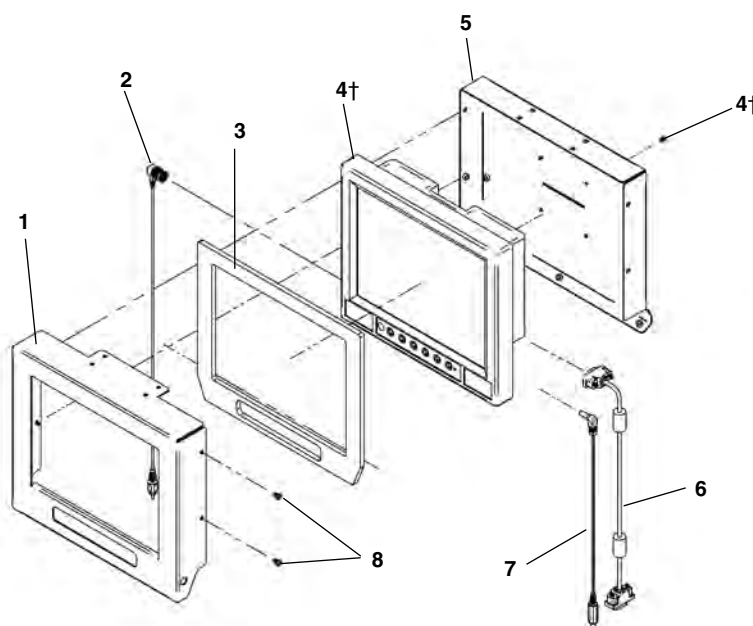


Ref. No.	Catalog No.	Description
1	33948	LCD Cover Plate
2	33953	BNC Cable Asm.
3	33958	LCD Gasket
4	33308	LCD Monitor
5	33963	LCD Mount Plate
6	33968	Male To Male VGA Cable
7	33973	DC Connector Cord
8	33298	Screw, 8-32 x 1/4" (4)

† Indicates That 4 M4 x 1.0 Screws Are Supplied With LCD Screen

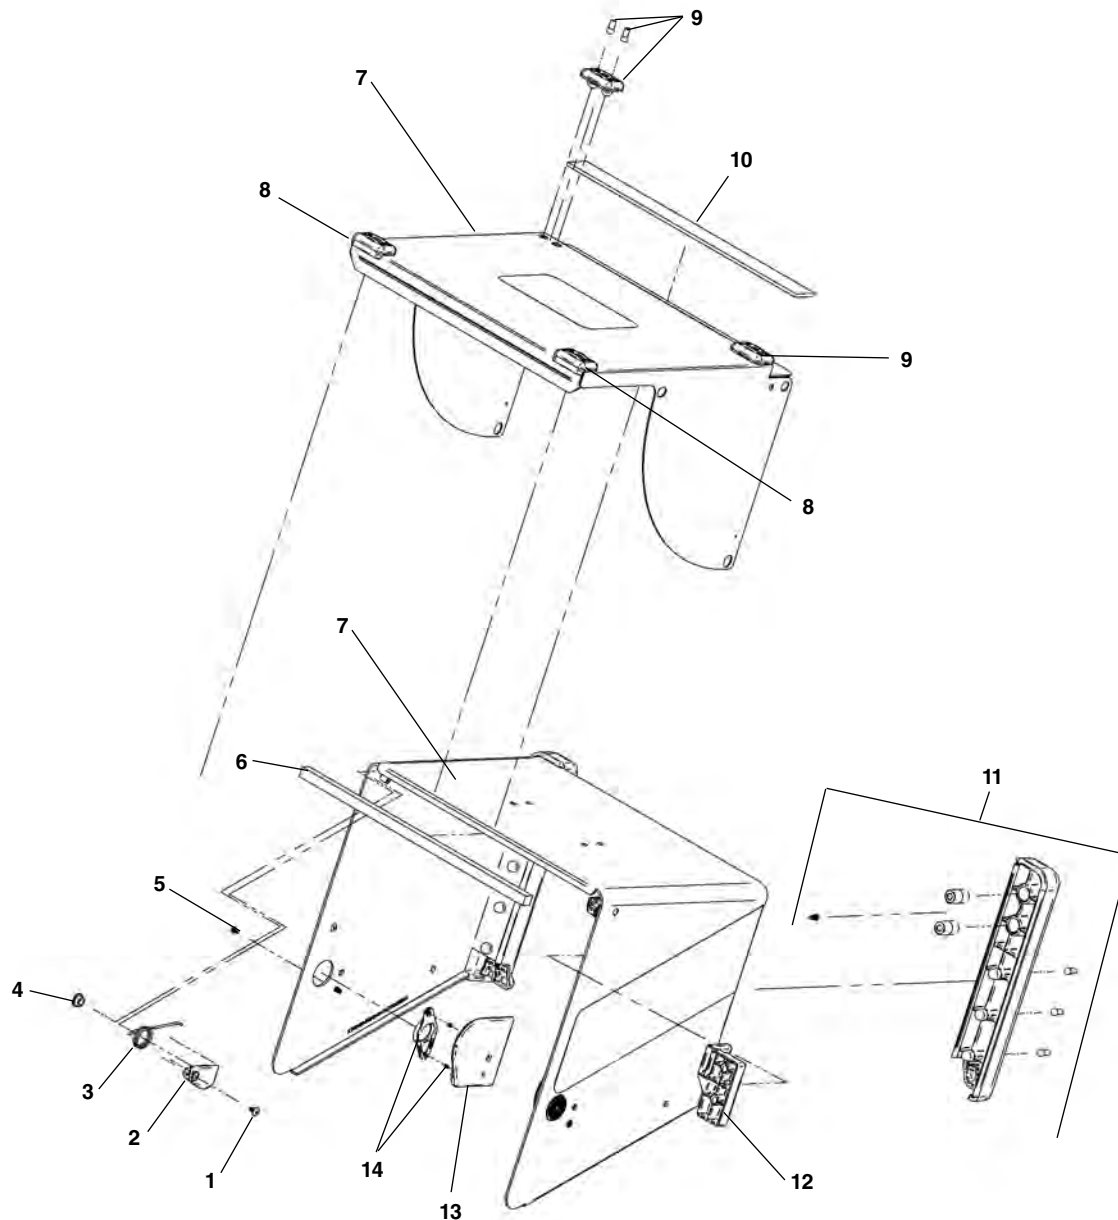


**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	33518	Screw, 6-32 x 1/4" (2)	9	33558	Rear Bumper Asm.
2	33523	Left Torsion Spring Cover	10	33563	Adhesive Foam Strip
3	33528	Right Torsion Spring Cover (Not Shown)	11	33568	Left Bumper Asm.
4	33533	Left Torsion Spring		33573	Right Bumper Asm. (Not Shown)
5	33538	Right Torsion Spring (Not Shown)	12	33578	Left Bumper Spacer
6	33543	Push In Fastener (2)		33583	Right Bumper Spacer (Not Shown)
7	14913	Screw 4-40 x 3/16"	13	14983	Right Button Block
8	33548	Foam Strip		14978	Left Button Block (Not Shown)
	33263	Shell Asm.	14	14018	Push Button & Spring Asm.
	33553	Front Bumper Asm.			

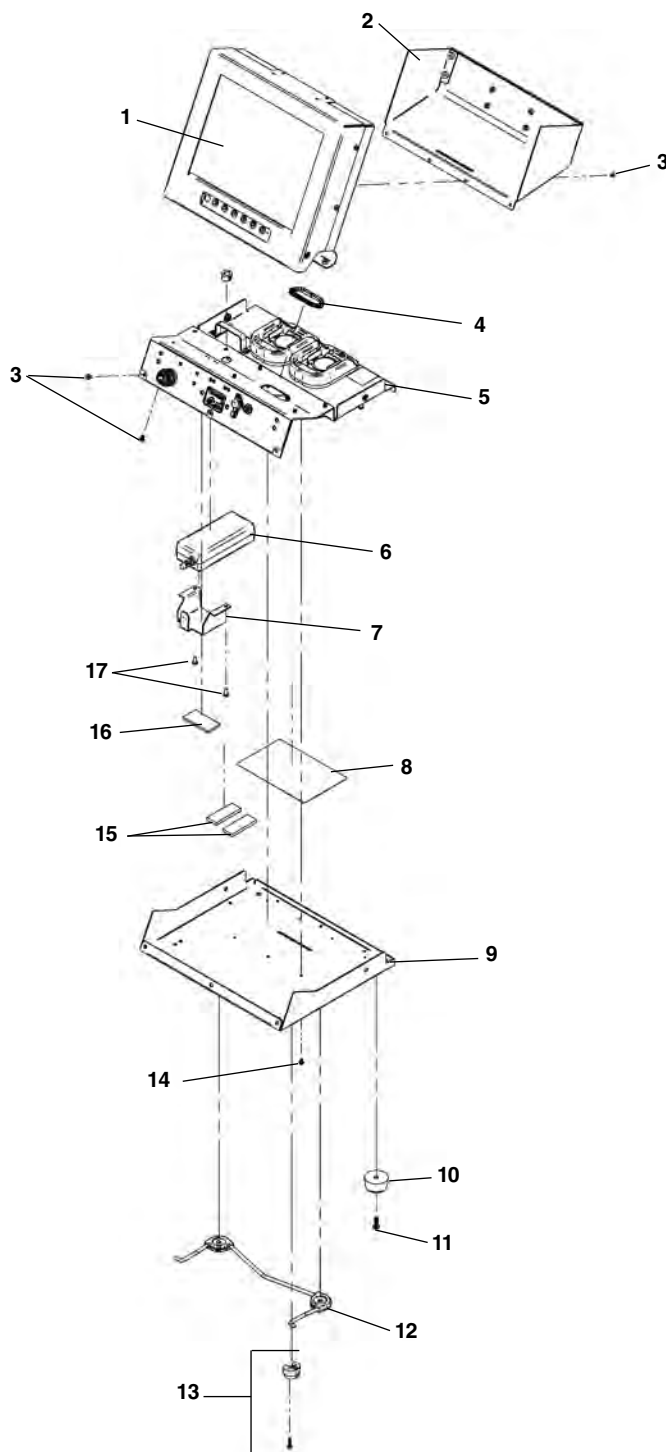

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	44453	LCD Only - 12.1"	11	14923	Screw, 10-32 x 5/8" (4)
2	33313	Rear Pocket	12	33338	Kickstand
3	33298	Screw, 8-32 x 1/4" (10)	13	14878	Kickstand Retainer Asm.
4	33363	Adhesive Gasket	14	33343	Screw, 6-32 x 1/4" (8)
5	33318	Middle Plate w/Electronics	15	33348	Neoprene Foam
6	33368	Power Supply	16	33353	Foam Rubber
7	33323	Power Supply Retaining Bracket	17	33268	Screw, 8-32 x 3/8" (2)
8	33328	Battery Insulation Label	Items Not Shown		
9	33333	Bottom Plate	—	33373	Power Cord Only (U.S.)
10	14918	Bottom Leg	—	33378	Power Cord Only (Euro)

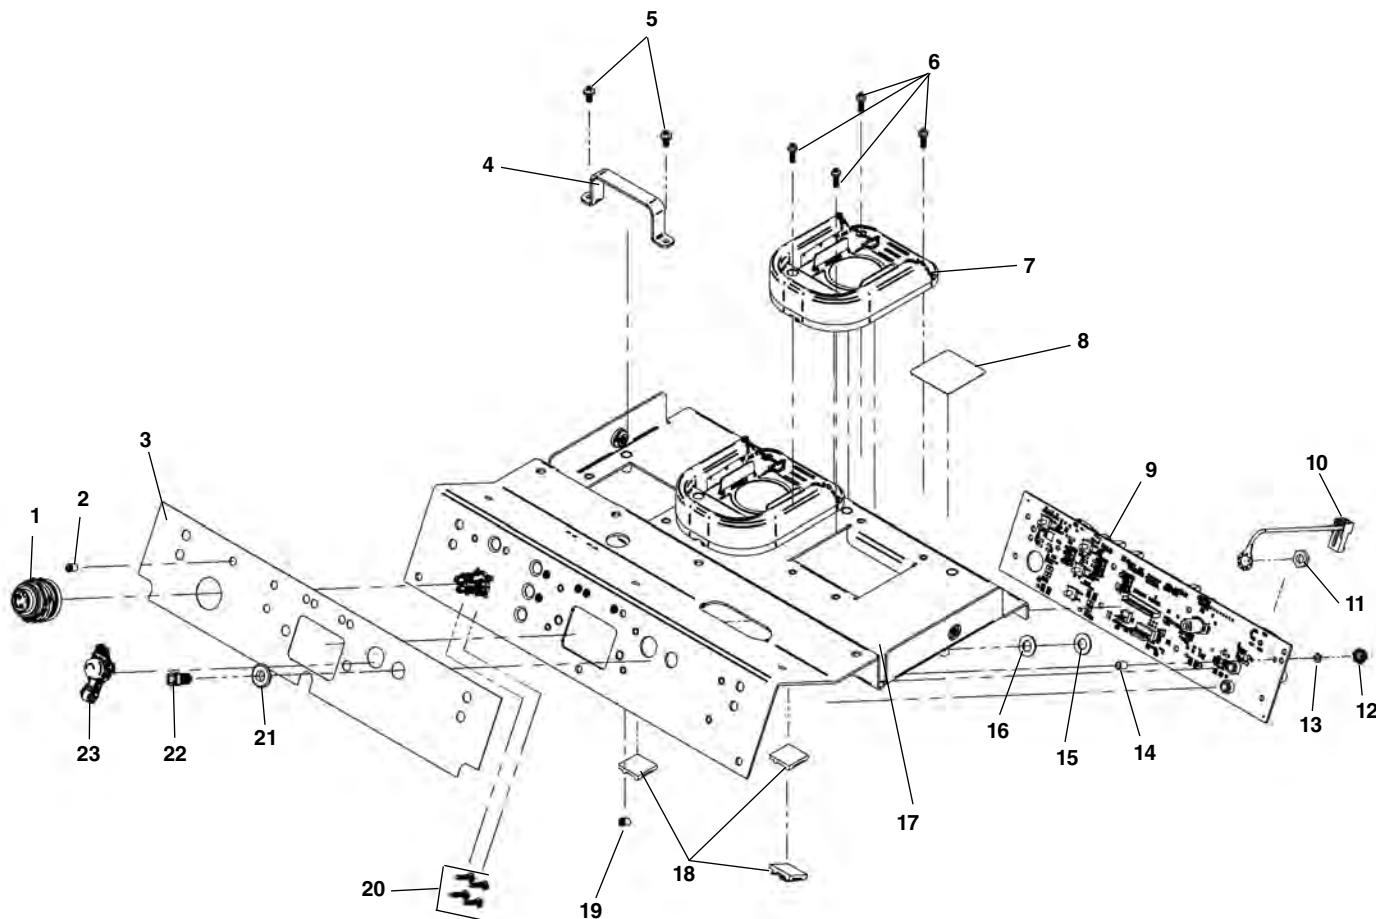

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	33848	Bulkhead	13	88047	Split Lock Washer
2	33853	Pipe Light (5)	14	33888	Spacer (8)
3	33858	Front Label	15	33893	Stainless Steel Washer (2)
4	33863	Power Supply Strap	16	33898	Nylon Washer (2)
5	33343	Screw, 6-32 x 1/4" (2)	17	33318	Plate w/Electronics
6	33928	Screw, 4-40 x 3/8" (4)	18	87247	Adhesive Wire Clips (3)
7	33868	Battery Socket	19	33938	Light Grommet (5)
8	33873	Warning Label	20	33908	Screw, 3-24 x 1/2" (4)
9	33878	Circuit Board Assembly	21	33913	Shoulder Washer
10	33883	Ground Terminal Cable Asm.	22	33918	Ground Terminal
11	33933	Hex Nut	23	33923	RCA Cover
12	91767	4-40 Hex Nut (8)			