

Shower Rods Technical Specification


Shower Rod Flange Set

58-F

Stock Numbers:

- q **58-F –Shower Rod Flange Set**
Satin Finish
Exposed Mounting Screws
Two Assemblies per Set
Fits 1" Diameter Rods

Dimensions:

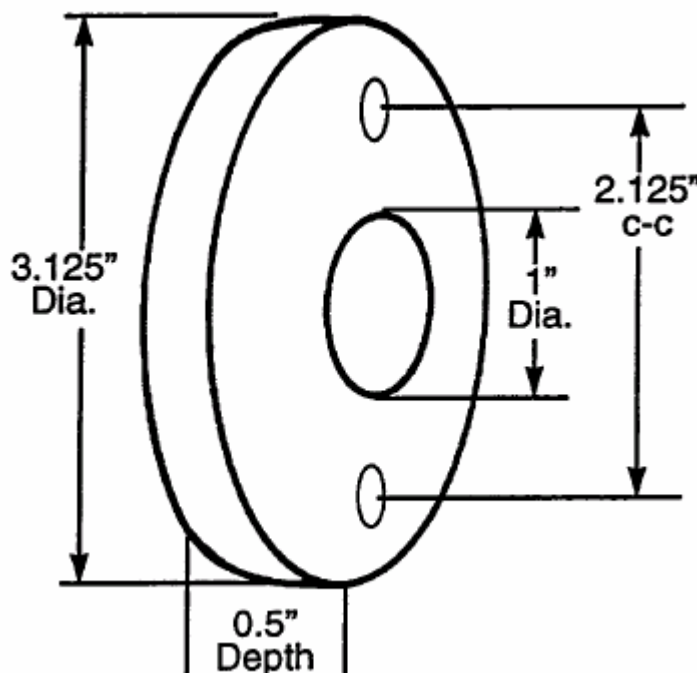

Materials:

Flanges are stamped from stainless steel.

Installation Instructions:

1. Place flanges on both ends of shower rod.
2. Position rod assembly in desired location.
3. Mark location of mounting holes for both flanges.
4. Drill starter holes.
5. Attach left bracket to wall using 2" screws (provided).
6. Insert rod and right bracket assembly into left bracket.
7. Slide right bracket against wall and attach with 2" screws (provided).

Note: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following optional fasteners are suggested: Tile/Masonry – Plastic or Lead Anchors; Plaster/Drywall – Toggle Bolts

Stock Number: _____ Shower Rod Flanges
By Creative Specialties