

Home Care Technical Specification


Bath Mat

DN7050

Stock Numbers:

- q **DN7050 – Bath Mat**
Adhesive Backing
Photo Box Packaging

Dimensions:

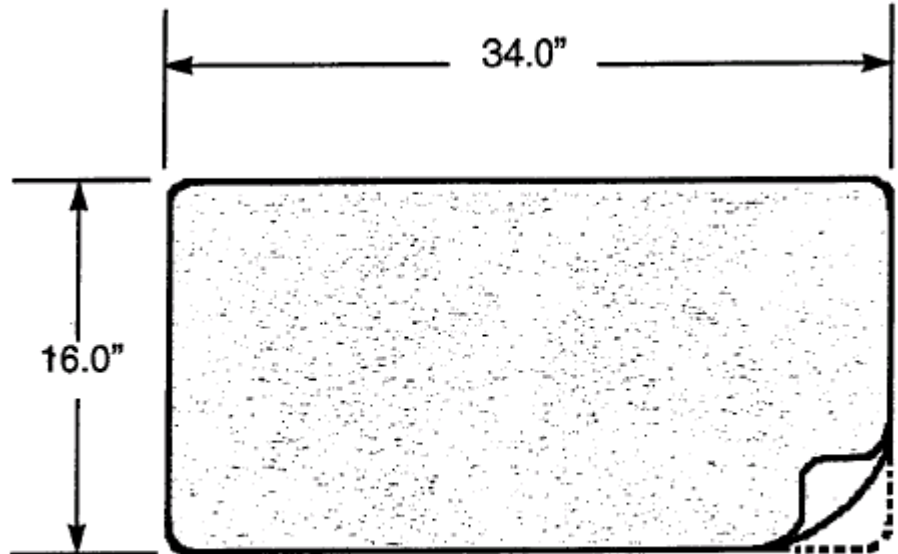

Materials:

Bath Mat is made from polyvinyl chloride with a pebbled top surface and a waterproof adhesive backing.

Note: Mat is easily trimmed to any smaller size desired.

Installation Instructions:

1. Prepare floor. Before beginning, make sure the tub or shower floor is completely clean and dry.
2. Prepare mat. Peel away three inches of the paper backing along the edge of the mat that will be located closest to the drain.
CAUTION: Do not touch the adhesive backing under the paper.
3. Position mat. Position the mat, paper side down, exactly where you want it.
4. Secure mat. Gently press down the exposed section of the adhesive against the floor surface. Then, reach under the mat and slowly remove the remaining paper, stopping periodically to gently press down the new exposed section of the mat. The mat will adhere immediately. No drying is needed.

Stock Number: _____ **Bath Mat**
By CSI Bath Furnishings



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 •
FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 •
FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116
©Copyright CSI Bath Furnishing Division of Moen 02/22/01