




# EVAPORATIVE COOLER PARTS

## PULLEYS

### VARIABLE PULLEYS

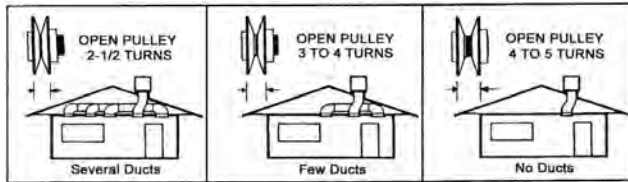

**IMPORTANT:** Variable pulleys must be opened 2½ to 5 full turns, depending on air resistance, or motor will overheat.

**IMPORTANT:** If motor cycles (stops and starts due to over-heating), open variable pulley until motor stops cycling. If cycling persists when pulley is fully opened, you must use the next size **SMALLER** pulley. Always use pulley size recommended by cooler manufacturer.

DIAL P/N	DESCRIPTION	DIA.	BORE	MOTOR	PKG	CTN QTY	CTN WT
----------	-------------	------	------	-------	-----	---------	--------

### VARIABLE MOTOR PULLEYS

5/8" BORE PULLEYS HAVE KEYWAYS							
6122	3¼" x 1/2" Variable Pulley				Bulk	20	17.5
▲6123	3¼" x 1/2" Variable Pulley	3¼"	1/2"	1/3 HP	▲ Bag	10	7.5
▲6124	3¼" x 1/2" Variable Pulley				Pkg	6	5.5
▲6129	3¼" x 5/8" Variable Pulley	3¼"	5/8"	1/3 HP	Bag	10	9.2
6143	3½" x 1/2" Variable Pulley				Bulk	20	20.3
▲6144	3½" x 1/2" Variable Pulley	3½"	1/2"	1/2 HP	▲ Bag	10	10.0
▲6145	3½" x 1/2" Variable Pulley				Pkg	6	6.3
▲6146	3½" x 5/8" Variable Pulley	3½"	5/8"	1/2 HP	Bag	10	10.8
6148	3¾" x 1/2" Variable Pulley				Bulk	20	23.1
▲6149	3¾" x 1/2" Variable Pulley	3¾"	1/2"	1/2 or 3/4 HP	Pkg	6	7.2
▲6151	3¾" x 1/2" Variable Pulley				▲ Bag	10	11.7
▲6153	3¾" x 5/8" Variable Pulley	3¾"	5/8"	1/2 or 3/4 HP	Bag	10	12.8
▲6170	4" x 1/2" Variable Pulley	4"	1/2"	1 HP	Bag	10	19.0
▲6172	4" x 5/8" Variable Pulley*	4"	5/8"	1 HP	▲ Bag	4	7.0
▲6173	4" x 5/8" Variable Pulley*				Pkg	6	10.1



VARIABLE (ADJUSTABLE) PULLEY




IRON VARIABLE (ADJUSTABLE) PULLEY

### VARIABLE MOTOR PULLEYS — CAST IRON

5/8" BORE PULLEYS HAVE KEYWAYS							
6190	3¼" x 1/2" Variable Iron Pulley	3¼"	1/2"	1/3 HP	Bulk	20	25.5
▲6191	3¼" x 1/2" Variable Iron Pulley	Replacement for VL34			▲ Bag	6	8.0
6192	3½" x 1/2" Variable Iron Pulley	3½"	1/2"	1/2 HP	Bulk	20	29.0
▲6193	3½" x 1/2" Variable Iron Pulley				▲ Bag	6	8.8
6194	3¾" x 1/2" Variable Iron Pulley	3¾"	1/2"	½ or 3/4 HP	Bulk	20	30.3
▲6195	3¾" x 1/2" Variable Iron Pulley	Replacement for 1VL40			▲ Bag	6	9.6
6196	3¾" x 5/8" Variable Iron Pulley	3¾"	5/8"	1/2 or 3/4 HP	Bulk	6	9.0
6197	4.15" x 1/2" Variable Iron Pulley*	4.15"	1/2"	1 HP	Bulk	6	12.5
6198	4.15" x 5/8" Variable Iron Pulley*	4.15"	5/8"	1 HP	Bulk	6	12.2
▲6199	4.15" x 5/8" Variable Iron Pulley*	Replacement for 1VL44			▲ Bag	4	8.2

\*For 1 H.P. Single Inlet Coolers

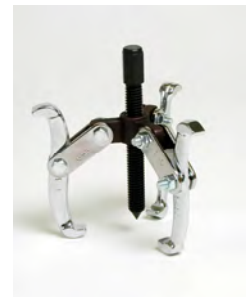

PULLEY PULLER

### PULLEY PULLER, SHAFT PLUGS AND HEX KEYS

DIAL P/N	DESCRIPTION	PKG	CTN QTY	CTN WT
▲6100	Pulley Puller	Removes blower or motor pulley from shaft.	Label	5 6.6
▲6752	¾" Blower Shaft Plug	Use as a plug to remove blower pulley on coolers with hollow shafts.	Clam	5 0.3
▲6755	1" Blower Shaft Plug		Clam	5 0.6
▲6757	¾" & 1" Blower Shaft Plug		Clam	5 0.5
▲9277	5/32" Hex Key & Handle	6 inch long standard 5/32" hex key for use on adjustable and fixed motor pulleys, blower pulleys and collars	Label	8 0.8
9278	5/32" x 2½" Hex Key	Same except 2½" long without handle.	Bulk	25 0.7



BLOWER SHAFT PLUG



HEX KEYS

▲ Display Carton with tear-away lid / ▲ UPC Items