


| TROUBLESHOOTING GUIDE | PROBLEM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|---|--|---|--|
| | Does not flush | a. Water supply valve closed. | a. Open valve and allow water to fill tank. |
| | | b. Supply line blocked. | b. Shut off water supply, disconnect supply line and inspect all gaskets and washers. Reassemble. Also, see Fluidmaster maintenance. (see Step 14) |
| | | c. Sand or debris lodged in water control. | c. Shut off water supply. Remove cap and clean as per Step 14. |
| | Poor or sluggish flush | a. Bowl water level too low. | a. Check that waterline level is set to correct height in tank, also verify the flush valve adjustments are set as per Step 10. |
| b. Supply valve partly closed. | | b. Open supply valve fully. Be sure that proper supply tube size is used. | |
| c. Partially clogged trapway and/or drain pipe and/or vent. | | c. Remove obstruction. Consult a plumber if necessary. | |
| d. Supply pressure too low. | | d. Normal supply pressure must be at least 20 psi. | |
| Toilet leaks | a. Poor supply line connection. | a. Review Step 9 of installation procedure. | |
| Toilet does not shut off | b. Poor bowl to tank/floor connection. | b. Review Step 4 through 7 of installation procedure. | |
| | a. Flush valve seat and/or rubber seal worn or deformed. | a. Shut off water supply. Replace flush valve or flush valve silicone seal. | |
| | b. Sand or debris lodged in water control. | b. Shut off water supply. Remove cap and clean per Step 14. | |

Please refer to the Installation Instructions for detailed corrective actions.

WARNING: Use of in tank cleaning products voids warranty as they may damage parts and cause leakage that may lead to property damage.

Repair parts are determined by toilet tank number which can be found marked inside tank.
NOTE: "XXX" represents color or trim finish options. Specify when ordering.

| PART NO. | DESCRIPTION | TANK NUMBER | |
|-------------------|---|-------------|---------------|
| | | .4035 | .4035 .516 |
| 735130-400-XXX0A | TANK COVER WITH PUSH BUTTON | ✓ | ✓ |
| 738565-426.0070A | FLUIDMASTER 400A VALVE | ✓ | |
| 738565-427.0070A | FLUIDMASTER 400A VALVE | | ✓ |
| 7301143-0070A | TANK COUPLING KIT #258 | ✓ | ✓ |
| 7381002-400.0070A | DUAL FLUSH VALVE | ✓ | |
| 7381002-401.0070A | DUAL FLUSH VALVE | | ✓ |
| 7381003-XXX0A | PUSH BUTTON ASSEMBLY - TOP MOUNT | ✓ | ✓ |
| 034783-XXX0A | BOLT CAP KIT | ✓ | ✓ |
| 760127-XXX0A | TOILET SEAT (ELONGATED RIM ONLY) | ✓ | ✓ |
| 760130-XXX0A | TOILET SEAT-SLOW CLOSE (ELONGATED RIM ONLY) | ✓ | ✓ |
| 7381042-0070A | FLUSH VALVE SILICONE SEAL | ✓ | ✓ |
| 760134-0200A | HINGE KIT FOR SLOW CLOSE SEAT | ✓ | ✓ |

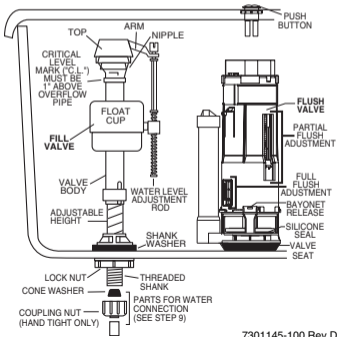

REPAIR PARTS LIST

For further assistance please call: *In the USA* (800) 442-1902 www.americanstandard-us.com,
In Canada (800) 387-0369 www.americanstandard.ca