

SPEAKMAN COMPANY

SE-910 Installation, Maintenance & Operation Instructions

DESCRIPTION

Stay-open ball valve for eye and eye/face washes.

SPECIFICATIONS

VALVE: 1/2" NPT Female Brass, Chrome-Plated. Stay-Open Ball Valve.

INLET: 1/2" NPT Female.

OUTLET: 1/2" NPT Female.

SHIPPING WEIGHT: 1 lb. (.454 kg)

OPTIONS

◇ SSBV2 (1/2" Stainless Steel Valve)

INSTALLATION

Assemble unit in desired position. Connect a water supply to the unit (use pipe sealant on all joints) that is a 1/2" minimum uninterrupted source of potable water. Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury.

OPERATION

The valve is activated by pushing the push handle back 90°. The unit will continue to discharge water until the push handle is manually pulled back to the off position.


TESTING PROGRAM

The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspectors initials should be noted.

MAINTENANCE

Should you need parts to repair this unit, please reference the parts listing below for correct part numbers. Before any maintenance is done **be sure to shut the water supply off.**

WARNING: Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

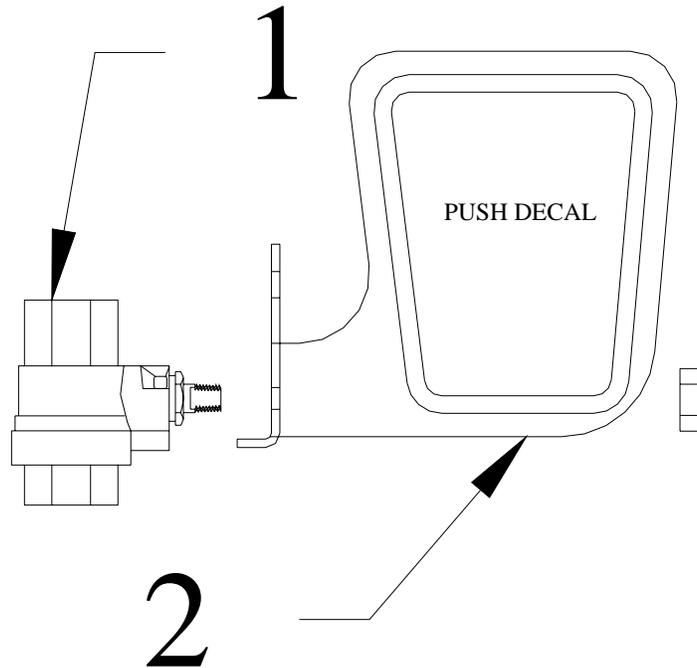

SE-910 REPLACEMENT/REPAIR PARTS

<u>ITEM</u>	<u>PART/GROUP #</u>	<u>DESCRIPTION</u>
1	SE-910	1/2" Ball Valve Paddle Handle

FLOW DATA

FLOW PRESSURE PSI (BAR)	20 (1.38)
FLOW RATE GPM (LPM)	12 (46)

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 20 PSI and a maximum static pressure of 125 PSI.

Note: All units meet existing ANSI Z358.1 Standards and OSHA Rules. Product improvements may cause specification and dimensional changes without notice.

SPEAKMAN®

PO Box 191 Wilmington, DE 19899 Phone: 800-537-2107 Fax: 800-977-2747
Visit us on the web at www.speakmancompany.com

06/06
92-1527 Rev-6